


MEASURING YOUR DOORWAY FOR A BARN DOOR

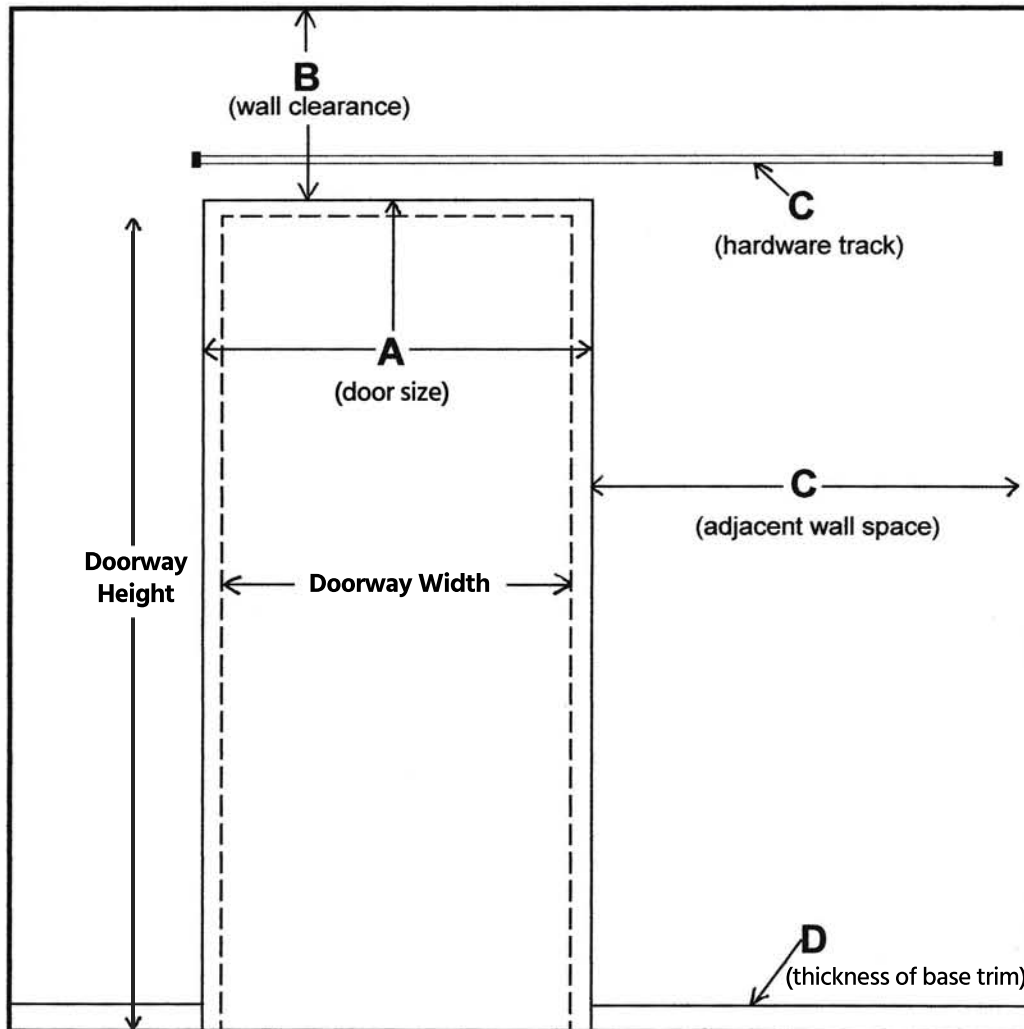

A. By how much should a door overlap the wall opening?

The ideal measured overlap should be at least 2" wider on each side and 1" taller than a wall opening without trim. For an opening with trim or molding, the measured overlap should be 1" wider.

B. How much wall clearance is needed above the wall opening?

Depending on the chosen hardware, 4" - 12".

C. How much wall space is needed to allow for the hardware track?

The track, half of which will hang above the door opening, should be double the width of the door. Consequently, the wall space next to the door opening should be equal to at least one width of the door to allow the door to fully open.

D. What is the accommodation for base and wall trim?

The depth measurement of trim is necessary to ensure proper clearance. Our hardware is manufactured to clear any standard molding, trim or door frame up to 5/8" thick. Spacer extenders for the hardware track are available, if needed.